

GRC6 / GRC8

Grooved

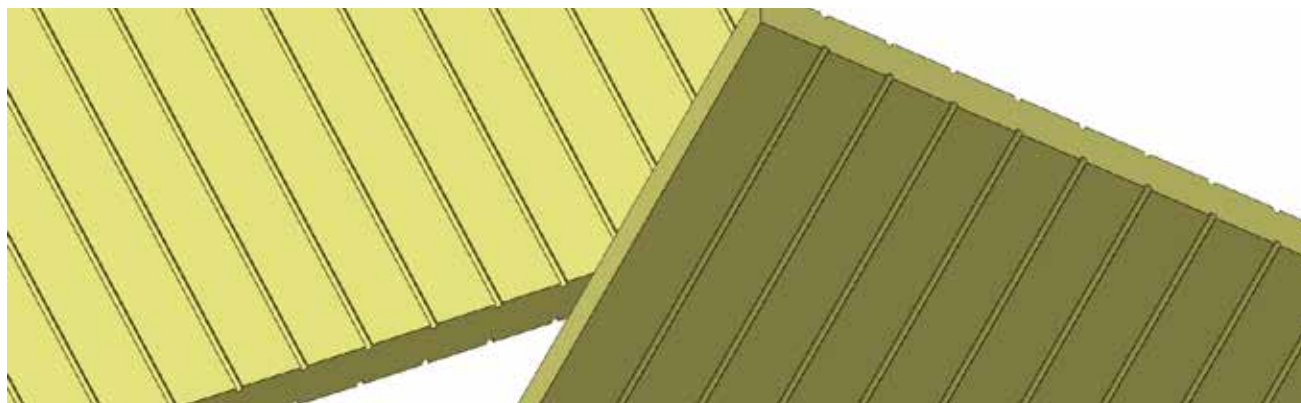


Figure 1: GRC6 top view (left picture) and bottom view (right)

MAIN FEATURE: DISTRIBUTOR

The groove configuration on GRC6/GRC8 enables a reliable, fast and robust distribution of resin on both sides of the core, only on flat or slightly curved surfaces. GRC6 is grooved along the sheet and GRC8 is grooved across the sheet.

DESCRIPTION

GRC6 two sides are grooved longitudinal and GRC8 two sides are grooved transverse direction of the sheet.

| Typical measurements | |
|--------------------------|------|
| Center-to-center grooves | 20mm |
| Depth (D) | 2mm |
| Width (W) | 2mm |

BENEFITS

- Reduces cost
- Saves labor
- Big process window
- Facilitating easy and fast lay-up of infusion strategy
- Resin consumption very low and not dependent of thickness

GRC6/GRC8 has got excellent infusion capabilities and also has economical benefits since there is no need for additional infusion materials. For example, flow meshes or flow mats, are usually not needed due to the effective grooving of the core.


The fast flow normally reduces the number of feeder lines needed to get a part effectively wetted out. This means that there are a lot of savings both in labor, materials and consumables compared to other infusion methods. Peel plies are seldom used in combination with GRC6/GRC8 since the added value is minor. However, it might occasionally be used to facilitate an easier grinding prior to secondary bonding or to get a smoother surface.

TYPICAL APPLICATIONS

- Panels
- Superstructures
- Webs
- Stiffeners

GRC6/GRC8 are not to recommend on surfaces with high demands of surface finish due to risk of print through from grooves.

(In combination with another finishing code, for example GS30, GRC6/ GRC8 may be used also in applications with curved surfaces.)

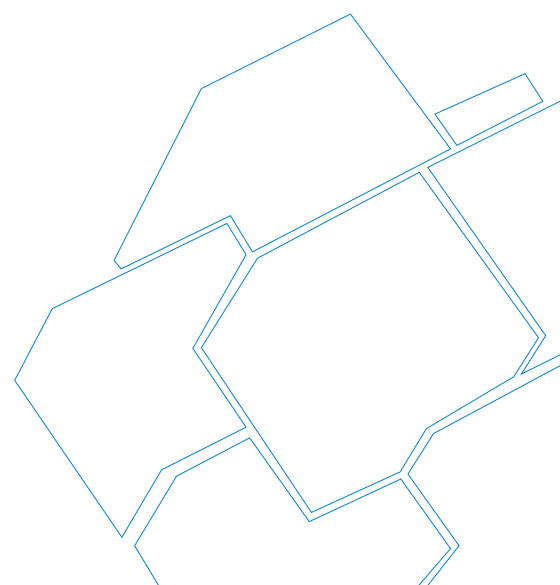

PROCESS CHARACTERISTICS

- Good wet-out
- Robust
- Fast
- Reliable

The dimensions of the grooves enable both low and high viscosity resins to flow steadily.

The design of the grooves (width, depth and distance between them) generates a fast flow and a proper saturation of fibers and core surface, which secures a good bonding between core and laminate.

LIMITATIONS AND CONSIDERATIONS

Resin consumption due to groove configuration is not related to core thickness.

GRC6/GRC8 are intended for flat surfaces and are not as robust as infusion configurations were

grooves are oriented in two directions, since that enables a flow around potential defects in grooves.

GRC6/GRC8 are intended for flat surfaces¹.

FINISHING SOLUTIONS

Diab utilizes a combination of its complete range of finishing options to provide an optimized solution based on customers' requirements and objectives.

Should the standard range not fulfill the needs, tailor made cuts and solutions can be defined and developed. Normally this is not needed as the range of options and Diab competence covers majority of needs in various industries.

KITS

To fully optimize the application for cost, performance and quality Diab can engineer and design a core kit delivered in lay-up sequence. The kit of precut pieces is optimized for mechanical requirements, lay-up, manufacturing process, cost and quality objectives. The kit is produced by our skilled personnel using a combination of traditional and CNC equipment to achieve the desired result.

By working with kits our customers gain access to the full competence of Diab in terms of engineered design, core materials and range of manufacturing techniques, all having a profound impact on the ability to reach the objectives of the application from cost, quality and performance point of view.

This data sheet may be subject to revision and changes due to development and changes of the material. The data is derived from tests and experience. The data is average data and should be treated as such. Calculations should be verified by actual tests. The data is furnished without liability for the company and does not constitute a warranty or representation in respect of the material or its use. The company reserves the right to release new data sheets in replacement.

All content in this publication is protected by International Copyright Laws.

Copyright © Diab July 2020.

Diab Group

Drottninggatan 7, 5th floor
SE-252 21 Helsingborg, Sweden
Tel +46 (0) 430 163 00
E-mail: info@diabgroup.com